



OWNER'S MANUAL

QUANTUM SENSOR

Model SQ-212, SQ-222, SQ-215, and SQ-225



APOGEE INSTRUMENTS, INC. | 721 WEST 1800 NORTH, LOGAN, UTAH 84321, USA
TEL: (435) 792-4700 | FAX: (435) 787-8268 | WEB: APOGEEINSTRUMENTS.COM

Copyright © 2016 Apogee Instruments, Inc.

TABLE OF CONTENTS

Owner’s Manual 1

 Certificate of Compliance 3

 Introduction 4

 Sensor Models 5

 Specifications 6

 Deployment and Installation 9

 Operation and Measurement 10

 Maintenance and Recalibration 13

 Troubleshooting and Customer Support 14

 Return and Warranty Policy 15

CERTIFICATE OF COMPLIANCE

EU Declaration of Conformity

This declaration of conformity is issued under the sole responsibility of the manufacturer:

Apogee Instruments, Inc.
721 W 1800 N
Logan, Utah 84321
USA

for the following product(s):

Models: SQ-212, SQ-222, SQ-215, SQ-225

Type: Quantum Sensor

The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

2014/30/EU	Electromagnetic Compatibility (EMC) Directive
2011/65/EU	Restriction of Hazardous Substances (RoHS 2) Directive

Standards referenced during compliance assessment:

EN 61326-1:2013	Electrical equipment for measurement, control and laboratory use – EMC requirements
EN 50581:2012	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Please be advised that based on the information available to us from our raw material suppliers, the products manufactured by us do not contain, as intentional additives, any of the restricted materials including cadmium, hexavalent chromium, lead, mercury, polybrominated biphenyls (PBB), polybrominated diphenyls (PBDE).

Further note that Apogee Instruments does not specifically run any analysis on our raw materials or end products for the presence of these substances, but rely on the information provided to us by our material suppliers.

Signed for and on behalf of:
Apogee Instruments, May 2016



Bruce Bugbee
President
Apogee Instruments, Inc.

INTRODUCTION

Radiation that drives photosynthesis is called photosynthetically active radiation (PAR) and is typically defined as total radiation across a range of 400 to 700 nm. PAR is often expressed as photosynthetic photon flux density (PPFD): photon flux in units of micromoles per square meter per second ($\mu\text{mol m}^{-2} \text{s}^{-1}$, equal to microEinsteins per square meter per second) summed from 400 to 700 nm (total number of photons from 400 to 700 nm). While Einsteins and micromoles are equal (one Einstein = one mole of photons), the Einstein is not an SI unit, so expressing PPFD as $\mu\text{mol m}^{-2} \text{s}^{-1}$ is preferred.

Sensors that measure PPFD are often called quantum sensors due to the quantized nature of radiation. A quantum refers to the minimum quantity of radiation, one photon, involved in physical interactions (e.g., absorption by photosynthetic pigments). In other words, one photon is a single quantum of radiation.


Typical applications of quantum sensors include incoming PPFD measurement over plant canopies in outdoor environments or in greenhouses and growth chambers, and reflected or under-canopy (transmitted) PPFD measurement in the same environments.

Apogee Instruments SQ series quantum sensors consist of a cast acrylic diffuser (filter), photodiode, and signal processing circuitry mounted in an anodized aluminum housing, and a cable to connect the sensor to a measurement device. Sensors are potted solid with no internal air space, and are designed for continuous PPFD measurement in indoor or outdoor environments. SQ series sensors output an analog voltage that is directly proportional to PPFD under sunlight (e.g., model SQ-215) or electric lights (e.g., model SQ-225). The voltage signal from the sensor is directly proportional to radiation incident on a planar surface (does not have to be horizontal), where the radiation emanates from all angles of a hemisphere.

SENSOR MODELS

This manual covers quantum sensor models SQ-212/SQ-222 and SQ-215/SQ-225, which provide a voltage signal. For additional models see the SQ-100/SQ-300, SQ-214/SQ-224, and SQ-420 manuals.

Model	Signal	Calibration
SQ-212	0-2.5 V	Sunlight
SQ-222	0-2.5 V	Electric light
SQ-215	0-5 V	Sunlight
SQ-225	0-5 V	Electric light
SQ-110	Self-powered	Sunlight
SQ-120	Self-powered	Electric light
SQ-214	4-20 mA	Sunlight
SQ-224	4-20 mA	Electric light
SQ-311	Self-powered	Sunlight
SQ-321	Self-powered	Electric light
SQ-313	Self-powered	Sunlight
SQ-323	Self-powered	Electric light
SQ-316	Self-powered	Sunlight
SQ-326	Self-powered	Electric light
SQ-420	USB	Sunlight and Electric light

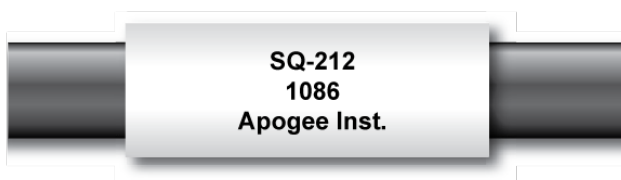

Sensor model number and serial number are located near the pigtail leads on the sensor cable. If you need the manufacturing date of your sensor, please contact Apogee Instruments with the serial number of your sensor.


SPECIFICATIONS

	SQ-212/SQ-222	SQ-215/SQ-225
Power Supply	5-24 V DC with a nominal current draw of 300 μ A	5.5-24 V DC** with a nominal current draw of 300 μ A **Sensors with a serial number smaller than 3762 should not be powered with more than 5 V DC
Sensitivity	1.0 mV per μ mol m ⁻² s ⁻¹	2.0 mV per μ mol m ⁻² s ⁻¹
Calibration Factor (Reciprocal of Sensitivity)	1.0 μ mol m ⁻² s ⁻¹ per mV	0.5 μ mol m ⁻² s ⁻¹ per mV
Calibrated Output Range	0 to 2.5 V	0 to 5.0 V
Calibration Uncertainty	\pm 5 % (see Calibration Traceability below)	
Measurement Repeatability	Less than 0.5 %	
Long-term Drift (Non-stability)	Less than 2 % per year	
Non-linearity	Less than 1 % (up to 2500 μ mol m ⁻² s ⁻¹ ; maximum PPFD measurement is 2500 μ mol m ⁻² s ⁻¹)	
Response Time	Less than 1 ms	
Field of View	180°	
Spectral Range	410 to 655 nm (wavelengths where response is greater than 50 % of maximum; see Spectral Response below)	
Spectral Selectivity	Less than 10 % from 469 to 653 nm	
Directional (Cosine) Response	\pm 5 % at 75° zenith angle (see Cosine Response below)	
Temperature Response	0.06 \pm 0.06 % per C (see Temperature Response below)	
Operating Environment	-40 to 70 C; 0 to 100 % relative humidity; can be submerged in water up to depths of 30 m	
Dimensions	24 mm diameter; 28 mm height	
Mass	90 g (with 5m of lead wire)	
Cable	5 m of two conductor, shielded, twisted-pair wire; additional cable available in multiples of 5 m; santoprene rubber jacket (high water resistance, high UV stability, flexibility in cold conditions); pigtail lead wires	

Calibration Traceability


Apogee SQ series quantum sensors are calibrated through side-by-side comparison to the mean of four Apogee model SQ-110 or SQ-120 transfer standard quantum sensors under high output T5 cool white fluorescent lamps. The transfer standard quantum sensors are calibrated through side-by-side comparison to the mean of at least three LI-COR model LI-190R reference quantum sensors under high output T5 cool white fluorescent lamps. The reference quantum sensors are recalibrated on a biannual schedule with a LI-COR model 1800-02 Optical Radiation Calibrator using a 200 W quartz halogen lamp. The 1800-02 and quartz halogen lamp are traceable to the National Institute of Standards and Technology (NIST).

Spectral Response

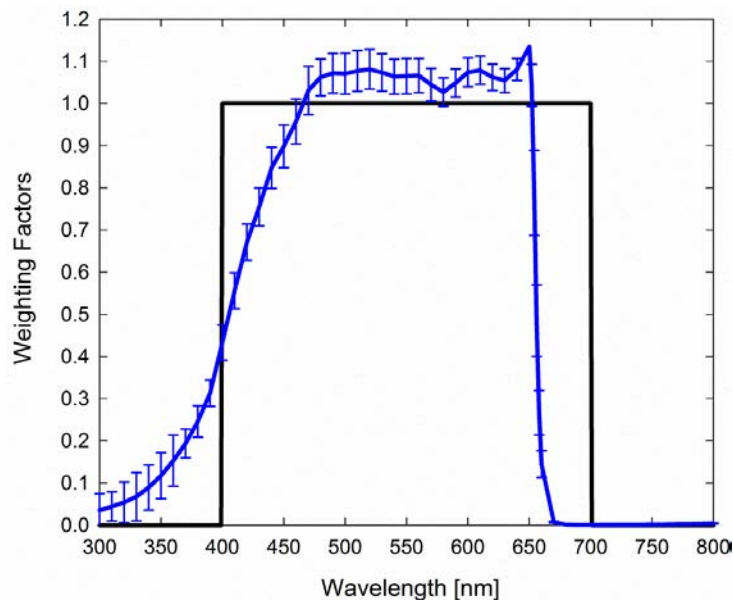


Mean spectral response of six SQ series quantum sensors (**error bars represent two standard deviations above and below mean**) compared to PPFD weighting function. Spectral response measurements were made at 10 nm increments across a wavelength range of 300 to 800 nm in a monochromator with an attached electric light source. Measured spectral data from each quantum sensor were normalized by the measured spectral response of the monochromator/electric light combination, which was measured with a spectroradiometer.

Temperature Response

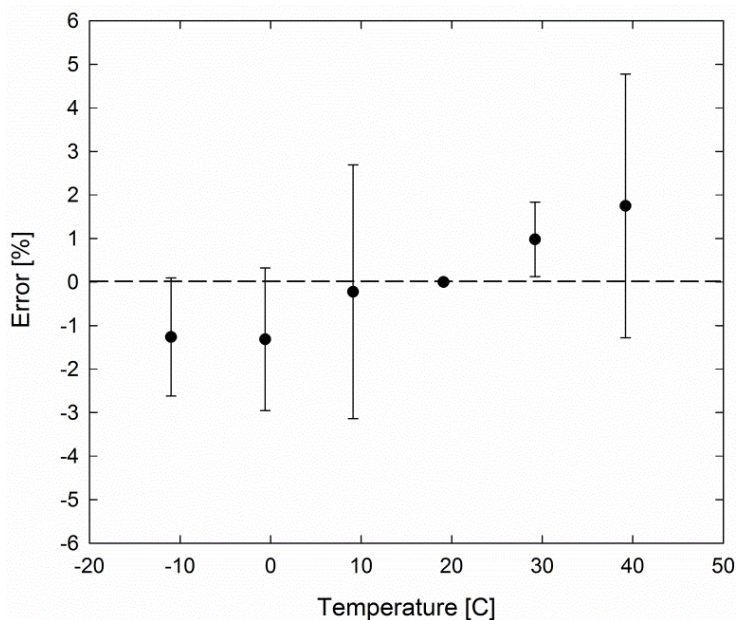


Mean temperature response of eight SQ series quantum sensors (**errors bars represent two standard deviations above and below mean**). Temperature response measurements were made at 10 C intervals across a temperature range of approximately -10 to 40 C in a temperature controlled chamber under a fixed, broad spectrum, electric lamp. At each temperature set point, a spectroradiometer was used to measure light intensity from the lamp and all quantum sensors were compared to the spectroradiometer. The spectroradiometer was mounted external to the temperature control chamber and remained at room temperature during the experiment.

Cosine Response

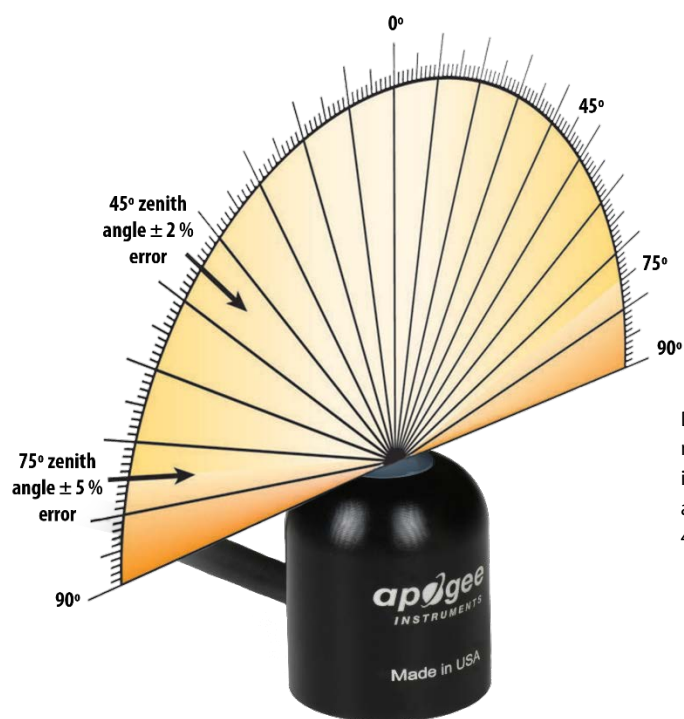

Directional, or cosine, response is defined as the measurement error at a specific angle of radiation incidence. Error for Apogee SQ series quantum sensors is approximately $\pm 2\%$ and $\pm 5\%$ at solar zenith angles of 45° and 75°, respectively.

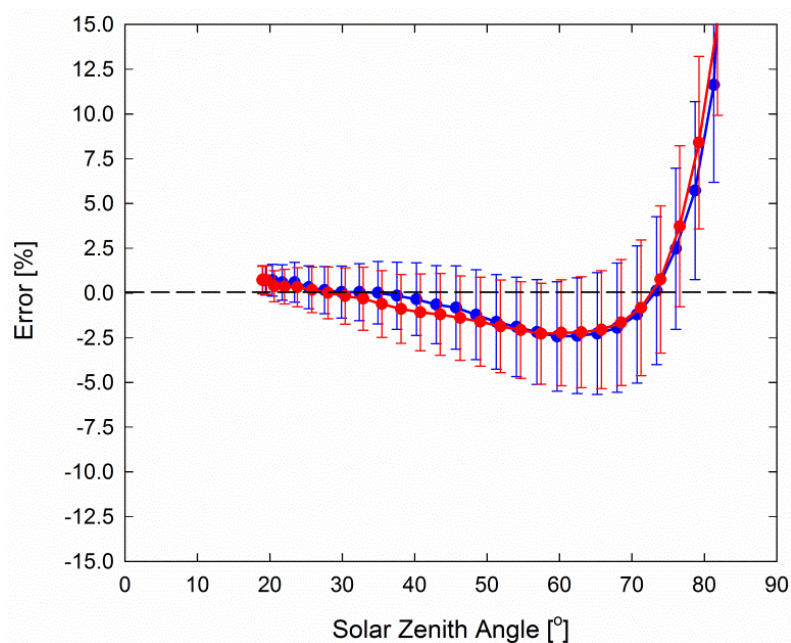


Mean cosine response of twenty-three SQ series quantum sensors (**error bars represent two standard deviations above and below mean**). Cosine response measurements were made by direct side-by-side comparison to the mean of four reference thermopile pyranometers, with solar zenith angle-dependent factors applied to convert total shortwave radiation to PPFD. Blue points represent the AM response and red points represent the PM response.

DEPLOYMENT AND INSTALLATION

Mount the sensor to a solid surface with the nylon mounting screw provided. To accurately measure PPFD incident on a horizontal surface, the sensor must be level. An Apogee Instruments model AL-100 leveling plate is recommended for this purpose. To facilitate mounting on a cross arm, an Apogee Instruments model AM-110 mounting bracket is recommended.




To minimize azimuth error, the sensor should be mounted with the cable pointing toward true north in the northern hemisphere or true south in the southern hemisphere. Azimuth error is typically less than 1 %, but it is easy to minimize by proper cable orientation.

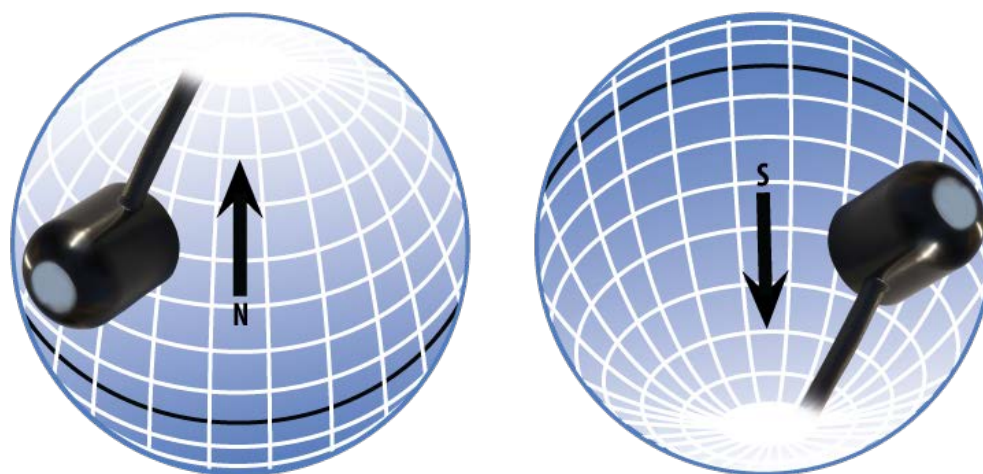

In addition to orienting the cable to point toward the nearest pole, the sensor should also be mounted such that obstructions (e.g., weather station tripod/tower or other instrumentation) do not shade the sensor. **Once mounted, the green cap should be removed from the sensor.** The green cap can be used as a protective covering for the sensor when it is not in use.

OPERATION AND MEASUREMENT

Connect the sensor to a measurement device (meter, datalogger, controller) capable of measuring and displaying or recording a voltage signal with a range of 0-2.5 V (SQ-212/222) or 0-5 V (SQ-215/225) to cover the entire range of PPFD from the sun. In order to maximize the measurement resolution and signal-to-noise ratio, the signal input range of the measurement device should closely match the output range of the quantum sensors. The amplification circuit requires a power supply of 2.5-24 VDC (SQ-212/222) or 5-24 VDC (SQ-215/225). NOTE: To prevent sensor damage, **DO NOT connect the sensor to a power source greater than 24 VDC.**

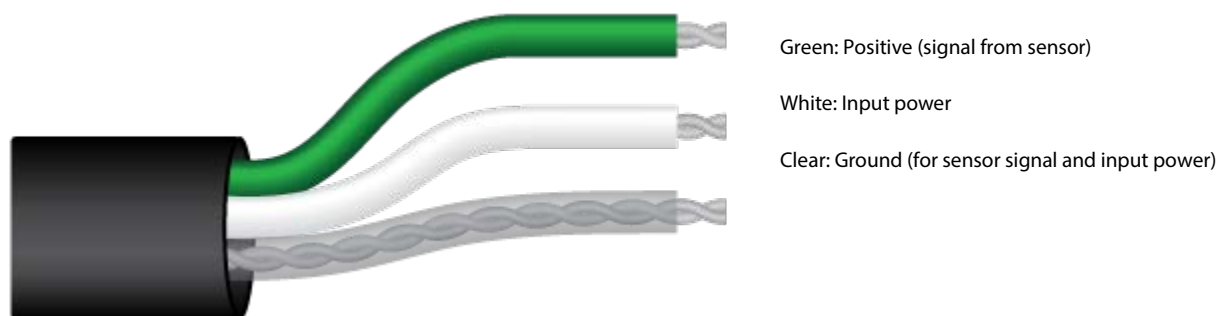

Sensor Calibration


Apogee amplified quantum sensor models have a standard PPFD calibration factor of exactly:

SQ-212, SQ-222: 1.0 $\mu\text{mol m}^{-2} \text{s}^{-1}$ per mV
SQ-215, SQ-225: 0.5 $\mu\text{mol m}^{-2} \text{s}^{-1}$ per mV

Multiply this calibration factor by the measured mV signal to convert sensor output to PPFD in units of $\mu\text{mol m}^{-2} \text{s}^{-1}$:

Calibration Factor ($0.5 \mu\text{mol m}^{-2} \text{s}^{-1}$ per mV) * Sensor Output Signal (mV) = PPFD ($\mu\text{mol m}^{-2} \text{s}^{-1}$)

0.5 * 4000 = 2000

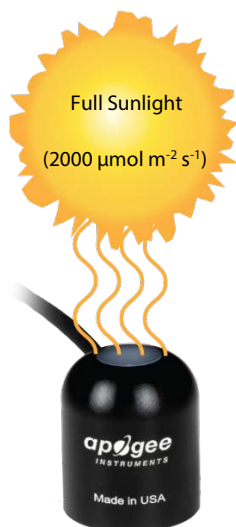

Example of PPFD measurement with an Apogee quantum sensor. Full sunlight yields a PPFD on a horizontal plane at the Earth's surface of approximately $2000 \mu\text{mol m}^{-2} \text{s}^{-1}$. This yields an output signal of 4000 mV for the 0-5 V option or an output signal of 2000 mV for the 0-2.5 V option. The signal is converted to PPFD by multiplying by the calibration factor.

SQ-215/225	Sensor Output: 4 V Conversion Factor: $0.5 \mu\text{mol m}^{-2} \text{s}^{-1}$ per mV
SQ-212-222	Sensor Output: 2 V Conversion Factor: $1.0 \mu\text{mol m}^{-2} \text{s}^{-1}$ per mV

Spectral Errors and Yield Photon Flux Measurements


Apogee quantum sensors are calibrated to measure PPFD for either sunlight or electric light. The difference between the calibrations is 12 %. A sensor calibrated for electric lights (calibration source is T5 cool white fluorescent lamps) will read approximately 12 % low in sunlight.

In addition to PPFD measurements, Apogee SQ series quantum sensors can also be used to measure yield photon flux density (YPFD): photon flux weighted according to plant photosynthetic efficiency (McCree, 1972) and summed. YPFD is also expressed in units of $\mu\text{mol m}^{-2} \text{s}^{-1}$, and is similar to PPFD, but is typically more closely correlated to photosynthesis than PPFD. PPFD is usually measured and reported because the PPFD spectral weighting function (equal weight given to all photons between 400 and 700 nm; no weight given to photons outside this range) is easier to define and measure, and as a result, PPFD is widely accepted. The calibration factor for YPFD is $0.9 \mu\text{mol m}^{-2} \text{s}^{-1}$ per mV for models SQ-212 and SQ-222, or $0.45 \mu\text{mol m}^{-2} \text{s}^{-1}$ per mV for models SQ-215 and SQ-225.

The weighting functions for PPFD and YPFD are shown in the graph below, along with the spectral response of Apogee SQ series quantum sensors. The closer the spectral response matches the defined PPFD or YPFD spectral weighting functions, the smaller spectral errors will be. The table below provides spectral error estimates for PPFD and YPFD measurements from light sources different than the calibration source. The method of Federer and Tanner (1966) was used to determine spectral errors based on the PPFD and YPFD spectral weighting functions, measured sensor spectral response, and radiation source spectral outputs (measured with a spectroradiometer). This method calculates spectral error and does not consider calibration, cosine, and temperature errors.

Federer, C. A., and C. B. Tanner, 1966. Sensors for measuring light available for photosynthesis. *Ecology* 47:654-657.

McCree, K. J., 1972. The action spectrum, absorbance and quantum yield of photosynthesis in crop plants. *Agricultural Meteorology* 9:191-216.

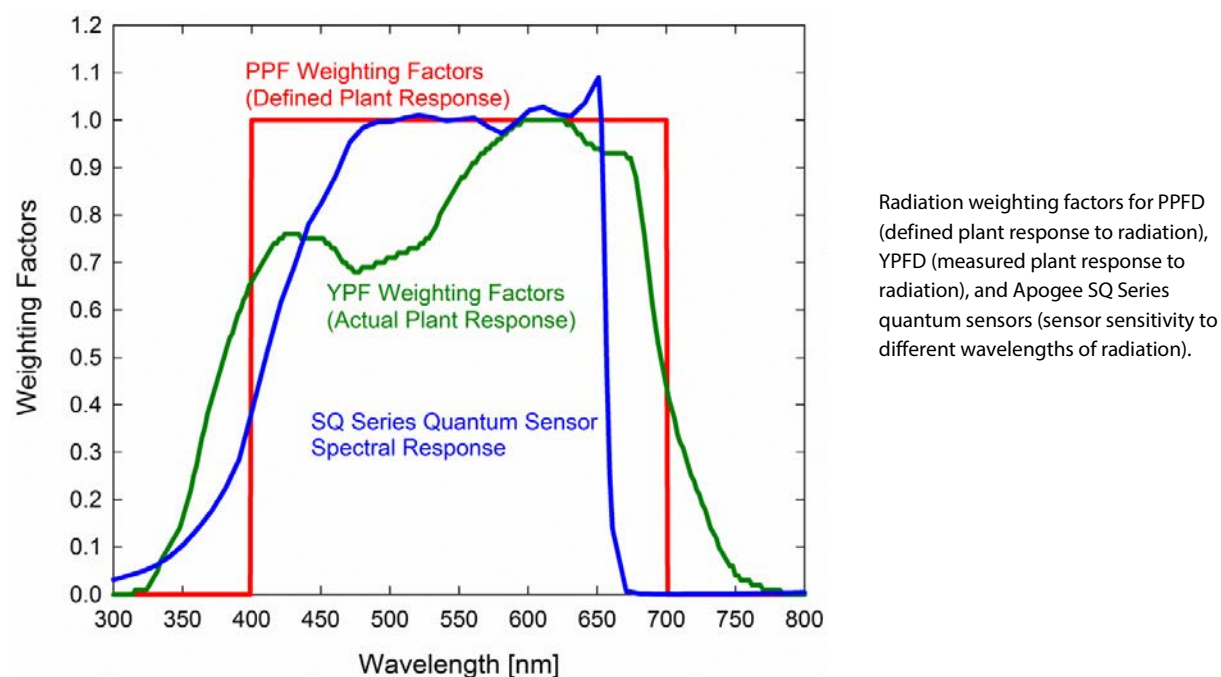

Spectral Errors for PPFD and YPFD Measurements with Apogee SQ Series Quantum Sensors

Radiation Source (Error Calculated Relative to Sun, Clear Sky)	PPFD Error [%]	YPFD Error [%]
Sun (Clear Sky)	0.0	0.0
Sun (Cloudy Sky)	1.4	1.6
Reflected from Grass Canopy	5.7	-6.3
Reflected from Deciduous Canopy	4.9	-7.0
Reflected from Conifer Canopy	5.5	-6.8
Transmitted below Grass Canopy	6.4	-4.5
Transmitted below Deciduous Canopy	6.8	-5.4
Transmitted below Conifer Canopy	5.3	2.6
Radiation Source (Error Calculated Relative to Cool White Fluorescent, T5)		
Cool White Fluorescent (T5)	0.0	0.0
Cool White Fluorescent (T8)	-0.3	-1.2
Cool White Fluorescent (T12)	-1.4	-2.0
Compact Fluorescent	-0.5	-5.3
Metal Halide	-3.7	-3.7
Ceramic Metal Halide	-6.0	-6.4
High Pressure Sodium	0.8	-7.2
Blue LED (448 nm peak, 20 nm full-width half-maximum)	-12.7	8.0
Green LED (524 nm peak, 30 nm full-width half-maximum)	8.0	26.2
Red LED (635 nm peak, 20 nm full-width half-maximum)	4.8	-6.2
Red, Blue LED Mixture (85 % Red, 15 % Blue)	2.4	-4.4
Red, Green, Blue LED Mixture (72 % Red, 16 % Green, 12 % Blue)	3.4	0.2
Cool White Fluorescent LED	-4.6	-0.6
Neutral White Fluorescent LED	-6.7	-5.2
Warm White Fluorescent LED	-10.9	-13.0

Quantum sensors can be a very practical means of measuring PPFD and YPFD from multiple radiation sources, but spectral errors must be considered. The spectral errors in the table above can be used as correction factors for individual radiation sources.

Underwater Measurements and Immersion Effect

When a quantum sensor that was calibrated in air is used to make underwater measurements, the sensor reads low. This phenomenon is called the immersion effect and happens because the refractive index of water (1.33) is greater than air (1.00). The higher refractive index of water causes more light to be backscattered (or reflected) out of the sensor in water than in air (Smith, 1969; Tyler and Smith, 1970). As more light is reflected, less light is transmitted through the diffuser to the detector, which causes the sensor to read low. Without correcting for this effect, underwater measurements are only relative, which makes it difficult to compare light in different environments.

The SQ-200 series sensors have an immersion effect correction factor of 1.08. This correction factor should be multiplied to measurements made underwater.

Further information on underwater measurements and the immersion effect can be found at


<http://www.apogeeinstruments.com/underwater-par-measurements/>.

MAINTENANCE AND RECALIBRATION

Moisture or debris on the diffuser is a common cause of low readings. The sensor has a domed diffuser and housing for improved self-cleaning from rainfall, but materials can accumulate on the diffuser (e.g., dust during periods of low rainfall, salt deposits from evaporation of sea spray or sprinkler irrigation water) and partially block the optical path. Dust or organic deposits are best removed using water, or window cleaner and a soft cloth or cotton swab. Salt deposits should be dissolved with vinegar and removed with a soft cloth or cotton swab. **Never use an abrasive material or cleaner on the diffuser.**

The Clear Sky Calculator (www.clearskycalculator.com) can be used to determine the need for quantum sensor recalibration. It determines PPFD incident on a horizontal surface at any time of day at any location in the world. It is most accurate when used near solar noon in spring and summer months, where accuracy over multiple clear and unpolluted days is estimated to be $\pm 4\%$ in all climates and locations around the world. For best accuracy, the sky must be completely clear, as reflected radiation from clouds causes incoming radiation to increase above the value predicted by the clear sky calculator. Measured values of PPFD can exceed values predicted by the Clear Sky Calculator due to reflection from the sides and edges of clouds. This reflection increases the incoming radiation. The influence of high clouds typically shows up as spikes above clear sky values, not a constant offset greater than clear sky values.

To determine recalibration need, input site conditions into the calculator and compare PPFD measurements to calculated PPFD values for a clear sky. If sensor PPFD measurements over multiple days near solar noon are consistently different than calculated values (by more than 6%), the sensor should be cleaned and re-leveled. If PPFD measurements are still different after a second test, email calibration@apogeeinstruments.com to discuss test results and possible return of sensor(s) for recalibration.

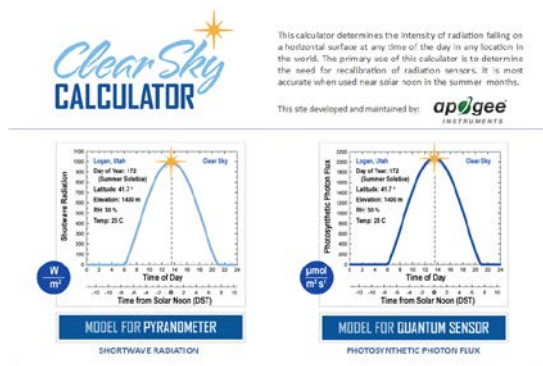

Homepage of the Clear Sky Calculator. Two calculators are available: one for quantum sensors (PPFD) and one for pyranometers (total shortwave radiation).

The image is a screenshot of the 'Clear Sky Calculator' for 'QUANTUM SENSORS'. It shows a form with input parameters and output results. The input parameters include Latitude (41.7), Longitude (111.8), Elevation (1400 m), Day of Year (172), Time of Day (12:00), Daylight Savings (1), Air Temperature (25), and Relative Humidity (30). The output results show Model Estimated PPFD (1194 µmol/m²/s), Measured PPFD (1190 µmol/m²/s), and Difference from Model (-0.2%). There is a 'RECALCULATE MODEL' button and a 'CONTACT APOGEE FOR RECALIBRATION' button.

Clear Sky Calculator for quantum sensors. Site data are input in blue cells in middle of page and an estimate of PPFD is returned on right-hand side of page.

TROUBLESHOOTING AND CUSTOMER SUPPORT

Independent Verification of Functionality

Apogee SQ-200 series quantum sensors provide an amplified voltage output that is proportional to incident PPFD. A quick and easy check of sensor functionality can be determined using a DC power supply and a voltmeter. Power the sensor with a DC voltage by connecting the positive voltage signal to the white wire from the sensor and the negative (or common) to the clear wire from the sensor. Use the voltmeter to measure across the green wire (output signal) and clear wire. Direct the sensor head toward a light source and verify the sensor provides a signal. Increase and decrease the distance from the sensor head to the light source to verify that the signal changes proportionally (decreasing signal with increasing distance and increasing signal with decreasing distance). Blocking all radiation from the sensor should force the sensor signal to zero.

Compatible Measurement Devices (Dataloggers/Controllers/Meters)

SQ-200 series quantum sensors are calibrated with a standard calibration factor of $1.0 \mu\text{mol m}^{-2} \text{s}^{-1}$ per mV (SQ-212 and SQ-222) or $0.5 \mu\text{mol m}^{-2} \text{s}^{-1}$ per mV (SQ-215 and SQ-225), yielding a sensitivity of 1 mV per $\mu\text{mol m}^{-2} \text{s}^{-1}$ (SQ-212 and SQ-222) or 2 mV per $\mu\text{mol m}^{-2} \text{s}^{-1}$ (SQ-215 and SQ-225). Thus, a compatible measurement device (e.g., datalogger or controller) should have resolution of at least 1 mV in order to provide PPFD resolution of $1 \mu\text{mol m}^{-2} \text{s}^{-1}$.

Cable Length

When the sensor is connected to a measurement device with high input impedance, sensor output signals are not changed by shortening the cable or splicing on additional cable in the field. Tests have shown that if the input impedance of the measurements device is greater than 1 mega-ohm there is negligible effect on the calibration, even after adding up to 100 m of cable. All Apogee sensors use shielded, twisted pair cable to minimize electromagnetic interference. For best measurements, the shield wire must be connected to an earth ground. This is particularly important when using the sensor with long lead lengths in electromagnetically noisy environments.

Modifying Cable Length:

See Apogee webpage for details on how to extend sensor cable length: (<http://www.apogeeinstruments.com/how-to-make-a-weatherproof-cable-splice/>).

Unit Conversion Charts

Apogee SQ series quantum sensors are calibrated to measure PPFD in units of $\mu\text{mol m}^{-2} \text{s}^{-1}$. Units other than photon flux density (e.g., energy flux density, illuminance) may be required for certain applications. It is possible to convert the PPFD value from a quantum sensor to other units, but it requires spectral output of the radiation source of interest. Conversion factors for common radiation sources can be found on the Unit Conversions page in the Support Center on the Apogee website (<http://www.apogeeinstruments.com/unit-conversions/>; scroll down to Quantum Sensors section). A spreadsheet to convert PPFD to energy flux density or illuminance is also provided in the Unit Conversions page in the Support Center on the Apogee website (<http://www.apogeeinstruments.com/content/PPFD-to-Illuminance-Calculator.xls>).

RETURN AND WARRANTY POLICY

RETURN POLICY

Apogee Instruments will accept returns within 30 days of purchase as long as the product is in new condition (to be determined by Apogee). Returns are subject to a 10 % restocking fee.

WARRANTY POLICY

What is Covered

All products manufactured by Apogee Instruments are warranted to be free from defects in materials and craftsmanship for a period of four (4) years from the date of shipment from our factory. To be considered for warranty coverage an item must be evaluated either at our factory or by an authorized distributor.

Products not manufactured by Apogee (spectroradiometers, chlorophyll content meters) are covered for a period of one (1) year.

What is Not Covered

The customer is responsible for all costs associated with the removal, reinstallation, and shipping of suspected warranty items to our factory.

The warranty does not cover equipment that has been damaged due to the following conditions:

1. Improper installation or abuse.
2. Operation of the instrument outside of its specified operating range.
3. Natural occurrences such as lightning, fire, etc.
4. Unauthorized modification.
5. Improper or unauthorized repair.

Please note that nominal accuracy drift is normal over time. Routine recalibration of sensors/meters is considered part of proper maintenance and is not covered under warranty.

Who is Covered

This warranty covers the original purchaser of the product or other party who may own it during the warranty period.

What We Will Do

At no charge we will:

1. Either repair or replace (at our discretion) the item under warranty.
2. Ship the item back to the customer by the carrier of our choice.

Different or expedited shipping methods will be at the customer's expense.

How To Return An Item

1. Please do not send any products back to Apogee Instruments until you have received a Return Merchandise Authorization (RMA) number from our technical support department by calling (435) 792-4700 or by submitting an online RMA form at www.apogeeinstruments.com/tech-support-recalibration-repairs/. We will use your RMA number for tracking of the service item.

2. Send all RMA sensors and meters back in the following condition: Clean the sensor's exterior and cord. Do not modify the sensors or wires, including splicing, cutting wire leads, etc. If a connector has been attached to the cable end, please include the mating connector – otherwise the sensor connector will be removed in order to complete the repair/recalibration.
3. Please write the RMA number on the outside of the shipping container.
4. Return the item with freight pre-paid and fully insured to our factory address shown below. We are not responsible for any costs associated with the transportation of products across international borders.
5. Upon receipt, Apogee Instruments will determine the cause of failure. If the product is found to be defective in terms of operation to the published specifications due to a failure of product materials or craftsmanship, Apogee Instruments will repair or replace the items free of charge. If it is determined that your product is not covered under warranty, you will be informed and given an estimated repair/replacement cost.

Apogee Instruments, Inc.
721 West 1800 North Logan, UT
84321, USA

OTHER TERMS

The available remedy of defects under this warranty is for the repair or replacement of the original product, and Apogee Instruments is not responsible for any direct, indirect, incidental, or consequential damages, including but not limited to loss of income, loss of revenue, loss of profit, loss of wages, loss of time, loss of sales, accrual of debts or expenses, injury to personal property, or injury to any person or any other type of damage or loss.

This limited warranty and any disputes arising out of or in connection with this limited warranty ("Disputes") shall be governed by the laws of the State of Utah, USA, excluding conflicts of law principles and excluding the Convention for the International Sale of Goods. The courts located in the State of Utah, USA, shall have exclusive jurisdiction over any Disputes.

This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state and jurisdiction to jurisdiction, and which shall not be affected by this limited warranty. This warranty extends only to you and cannot be transferred or assigned. If any provision of this limited warranty is unlawful, void or unenforceable, that provision shall be deemed severable and shall not affect any remaining provisions. In case of any inconsistency between the English and other versions of this limited warranty, the English version shall prevail.

This warranty cannot be changed, assumed, or amended by any other person or agreement.

APOGEE INSTRUMENTS, INC. | 721 WEST 1800 NORTH, LOGAN, UTAH 84321, USA
TEL: (435) 792-4700 | FAX: (435) 787-8268 | WEB: APOGEEINSTRUMENTS.COM

Copyright © 2016 Apogee Instruments, Inc.